
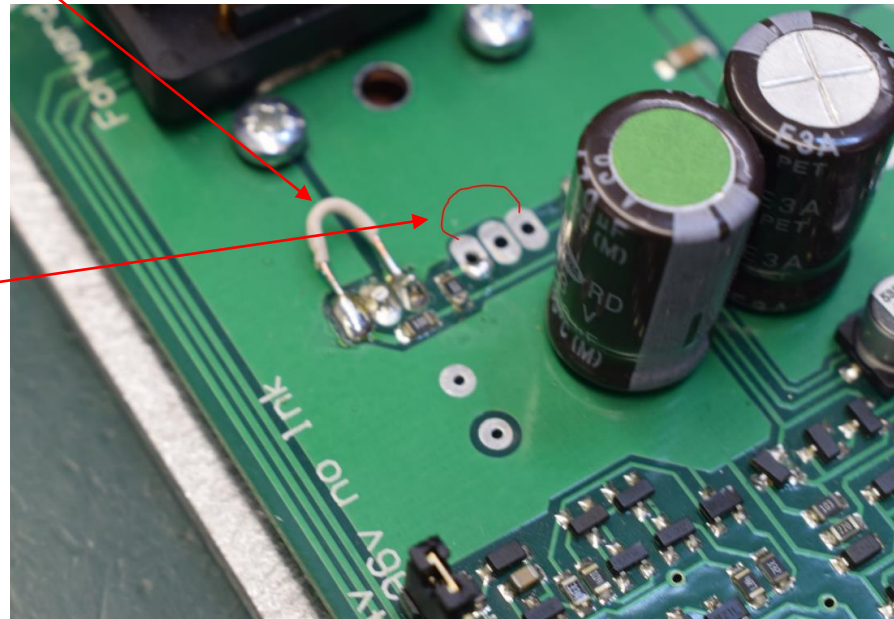


Disabling regenerative braking on the DNO series

1. Identify and remove this 100 ohm resistor.

2. Fit a shorting link between the gate and source legs of the highside mosfet [s].

3. For the DNO 10 fit a shorting link across the mosfet that is here as well.

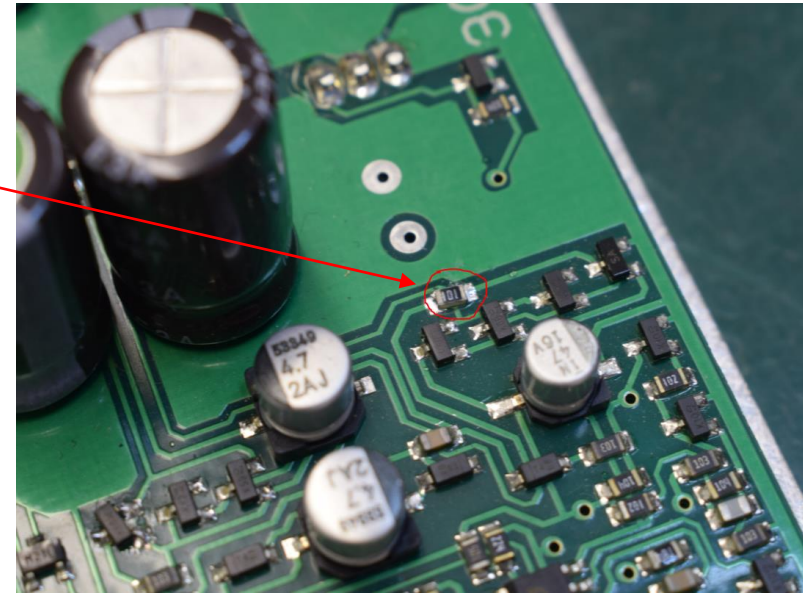

Note: Avoid setting the deceleration time to low values after this modification. After the DNOs internal ramp has reached zero, the direction relays will drop out and put a direct short across the motor which will cause a sudden stop.